



**Congratulations on your purchase of the GoaltendersBFF Pro-Angle!**  
**You're on your way to becoming the best goaltender that you can be!**

**\*PLEASE READ BEFORE USE\***


**WARNINGS: Misuse may cause failure!**

- \*Do not allow Pro-Angle to be struck by pucks –high impacts may cause damage
- \*Attach lower lines 20 inches above ice – Do not allow lines to be skated on!
- \*Never allow uncontrolled rewind of lines – internal damage may occur!  
(Guide lines by hand to the Pro-Angle to rewind)
- \*Do not over extend lines – Stop extension when black warning marks are exposed at 50 feet!
- \*Never attempt to shoot or fake shoot the Pro-Angle
- \*Make sure Velcro straps are secure
- \*Always secure safety hooks to netting
- \*When using the Pro-Angle in conjunction with live shooting, always move the magnetic clips to the backside of the post – a direct hit from a puck may cause damage
- \*Not designed for use at temperatures below 10 degrees F.
- \*Allow unit to dry – Leave the carrying case open indoors to evaporate moisture
- \*Watch for worn lines – call for replacement lines if frayed
- \*Follow the step-by-step Goaltenders Development Plan to help you get the most from your Pro-Angle

**Thank you! Have fun and Good Goaltending!**

***Thank you for your purchase!***

**INCLUDED IN YOUR PRO-ANGLE PACKAGE:**

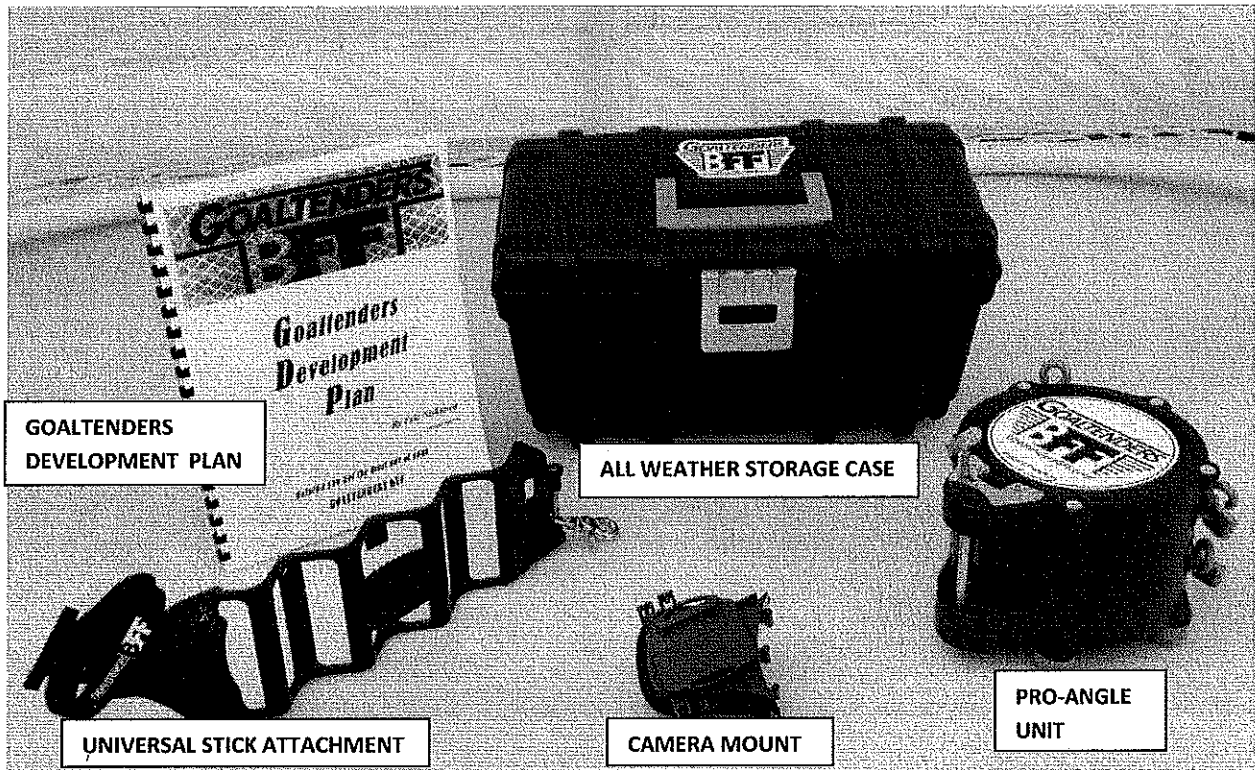

**GOALTENDERS  
DEVELOPMENT PLAN**


**ALL WEATHER STORAGE CASE**

**UNIVERSAL STICK ATTACHMENT**


**CAMERA MOUNT**

**PRO-ANGLE  
UNIT**


**USING YOUR PRO-ANGLE**

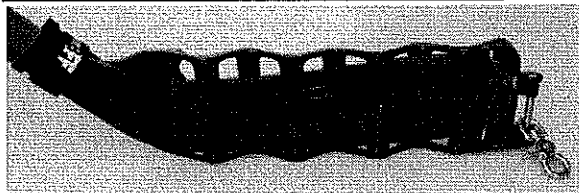

**INSERT BLADE INTO UNIVERSAL STICK ATTACHMENT & SECURE VELCRO STRAP AROUND STICK**

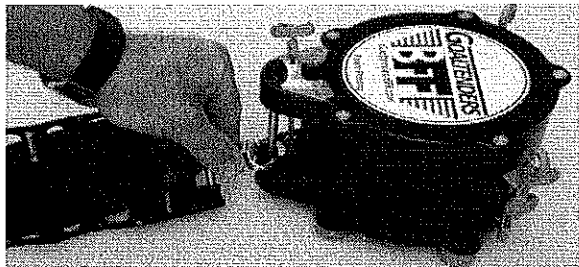

**ATTACH TRIGGER SNAP TO ROUND METAL POST OF PRO-ANGLE**

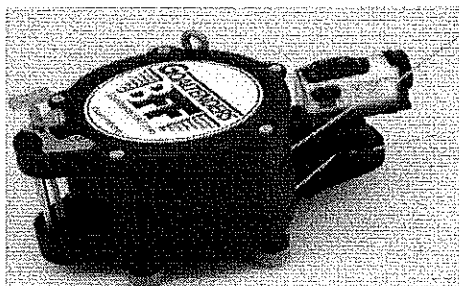


See page 4 for camera mount set-up (Go-Pro or Sony Action Cam)

**If using a camera:** Run bottom lines through the guides on the camera mount- this allows the camera to track properly.


**If not using a camera:** Remove camera mount to prevent tangling of the lines. Camera is friction fit so simply press down on the back of the mount and it will slide off.

## WITH THE GOALTENDER IN THE NET:

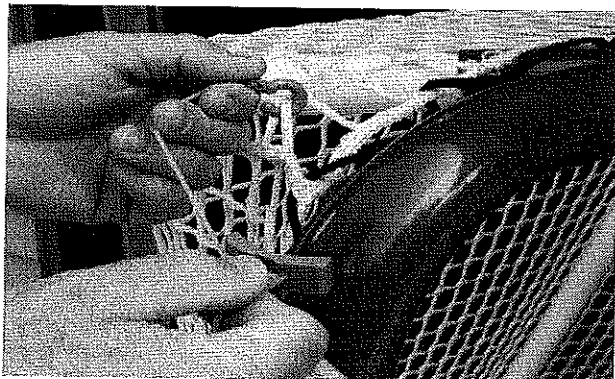


GRAB THE UPPER LEFT SAFETY HOOK AND EXTEND THE LINE FROM THE PRO-ANGLE TO THE UPPER LEFT CORNER OF THE GOAL AND SECURE TO THE NET.

SLIDE THE MAGNETIC CLIP DOWN THE LINE ABOUT 8" AND SNAP ONTO CORNER OF METAL GOAL POST.

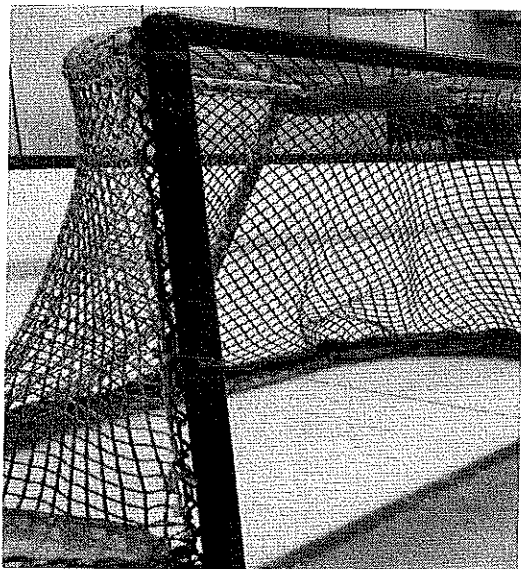

GRAB THE LOWER LEFT SAFETY HOOK AND EXTEND TO THE LEFT POST. ATTACH HOOK TO NET AND MAGNETIC CLIP TO THE POST  
**APPROXIMATELY 20" ABOVE ICE.**


DO NOT ALLOW LINE TO LIE ON ICE!

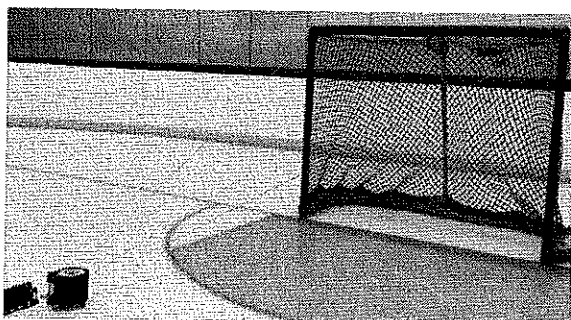

REPEAT STEPS 4 AND 5 WITH RIGHT SIDE

Watch the *"Set-up and Use"* video on the website under the Training tab-  
[www.goaltendersbff.com](http://www.goaltendersbff.com).

Also, watch the training videos that complement the *"Goaltenders Development Plan"* for optimal use of your Pro-Angle!

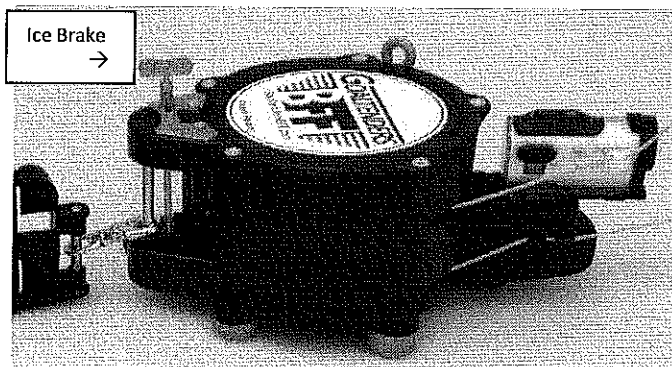

**IF PRO-ANGLE IS EQUIPPED WITH AN ICE BRAKE TO STOP THE PRO-ANGLE FROM SLIDING TOWARDS THE NET WHEN LEFT UNATTENDED. DEPRESS THE ICE BRAKE HANDLE AND SLIDE TO THE RIGHT ENGAGING THE ICE BRAKE. Apply downward pressure with both thumbs on the metal plate surrounding the ice brake lever. **DO NOT** press down hard on the lever as damage may occur!**

**TIP FOR USE:** For goalie to enter or exit the Pro-Angle webbing, lift the blade of your hockey stick and hold the Pro-Angle high in the air so the goaltender can skate under the lines. Do not allow lines to be skated over!

**CAMERA MOUNT SET-UP AND USE – Please see next page**

---

**IF LINES BECOME WORN OR FRAYED, PLEASE CONTACT US FOR REPLACEMENT**

**NISKY LLC**

**5992 TALL PINES RD NE**

**BEMIDJI, MN 56601**


**218-444-9977**

**[goaltendersbff@gmail.com](mailto:goaltendersbff@gmail.com)**

**Limited Warranty**


Any GoaltendersBFF product determined by NISKY LLC to be defective in materials or workmanship within 30 days from the date of original retail purchase will be repaired or replaced, at NISKY LLC's option, free of charge when received at the above address freight prepaid. Any implied warranties of merchantability or fitness for a particular purpose are limited to the same duration as this express warranty. NISKY LLC shall not be liable for any incidental or consequential damages. This warranty does not cover damages resulting from misuse, abuse, neglect, alteration (including by paint, solvents, or like products), failure to perform maintenance as instructed, or unauthorized repair or service. This warranty does not cover GoaltendersBFF products that have been reconditioned and only covers GoaltendersBFF products that were broken or damaged during the normal course of use due to a manufacturer defect, and when the aforementioned instructions and warnings were heeded. This warranty does not cover any representation or warranty made by dealers beyond the provisions of this warranty. Proof of purchase is required to obtain warranty service or replacement. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

**If using a GoPro camera:**

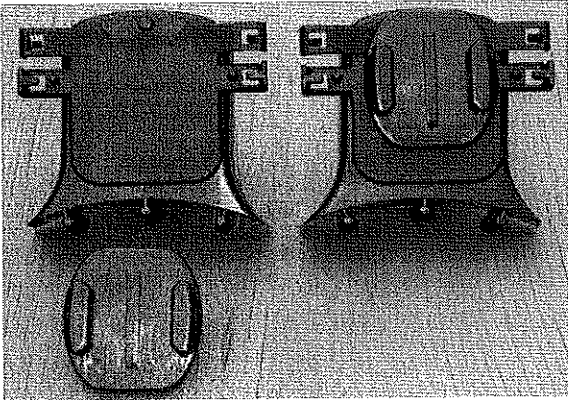


For best camera tracking,  
attach the Go-Pro platform as  
far forward on the camera  
mount as possible as shown

**If using a Sony Action Cam:**

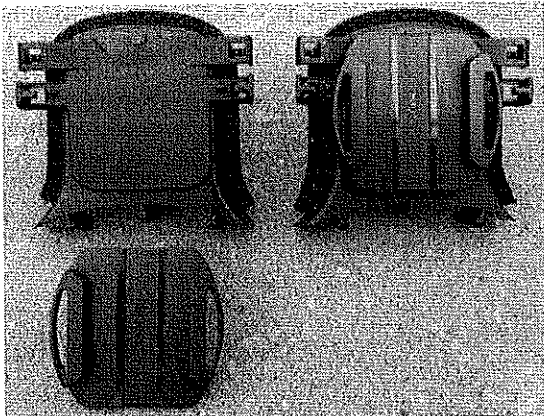


The Sony camera platform  
is larger than the Go-Pro,  
so attach as shown

There are also directional clips enclosed for use with the Sony Action Cam.

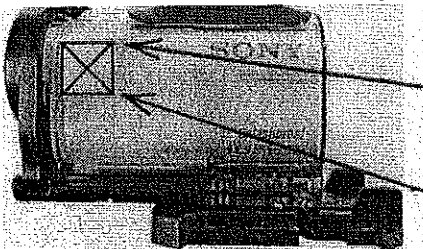

Left Side

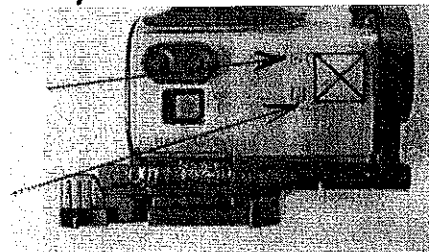

Right Side

Attach enclosed directional clips to Sony Action Cam's protective housing as shown – one clip on each side with open ends down. Thread Pro-Angle's upper lines through these directional clips for optimal camera tracking.

*Thank you for your purchase!      Have fun & good goaltending!*